



- Neptronic Zone Humidity Sensor Controller
 - Installation Guidelines
 - Wiring Connections
 - Programming Instructions
- (7 pgs)

Neptronic Zone Humidistat / Sensor Controller

The Neptronic Zone Humidistat & Sensor (combined)

Model Part # IHC-HRO20

One Humidistat/Sensor is provided for each zone of system operation and is generally positioned at eye level where real time monitoring represents a realistic reading of the larger zone area.

The Sensor reads real time relative humidity levels and signals a “call for humidity” when the percentage of relative humidity decreases from “set point” which then sequentially energizes the on cycle of both the pump station and the fans sending 1000 psi water flow to all fans in a zone.

Upon reaching relative humidity “set point” the humidistat signals the cycling off of the pump station and fans cycle off one minute later (auto mode).


Humidistat connects in at the designated terminal contacts at the back of the pump enclosure.

Locate the Humidistat where that location represents the reasonable reading for the entire zone area. Located at eye level with easy access for monitoring as needed.



Features

- Built in Sensor – precision $\pm 3\%$
- Electronic LCD & Backlight
- External Humidity Sensor Input
- Set Point Range: 10-90% (in 1% increments)
- Lockable Set Point
- Real-Time Humidity displayed
- Dimensions: 2.85” wide x 4.85” high x 1” deep
- Weight: 0.3 lbs
- Power supply: 22 - 26 Vac 50/60 Hz

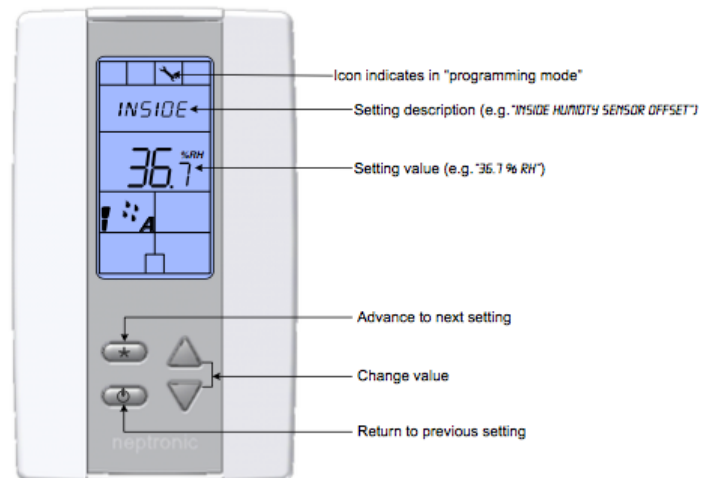



- Neptronic Zone Humidity Sensor Controller
 - Installation Guidelines
 - Wiring Connections
 - Programming Instructions
- (7 pgs)

Neptronic Zone Humidity Sensor Controller Operation


This pump is designed to be controlled by the zone Neptronic HRO20 humidity controller with built-in sensor. See the controller instructions for programming steps and operational capabilities contained in the last section of this document. Once your RH set point is recorded, the controller will send the required start signal to the pump to initiate its operation.

The start signal is sent to the pumps PLC microprocessor which in turn will sequentially turn on any fans, the water valves, and the pump motor with factory built-in delays between each operation. Once the start signal is terminated, the PLC will then sequentially turn off the pump motor, the water valves, and any fans with the same built in delays between operations. The pump design is intended that the unit (including the PLC) remain on and waiting for an incoming start signal to initiate operation.

One Humidistat with built-in sensor is provided for each zone of system operation and is generally positioned at eye level where real time monitoring represents a realistic reading of the larger zone area.

The Sensor reads real time relative humidity levels and signals a “call for humidity” when the percentage of relative humidity decreases from “set point” by 3.1% which then sequentially energizes the on cycle of both the pump station and the fans sending 1000 psi water flow to all fans in a zone. Upon reaching relative humidity “set point” the humidistat signals the cycling off of the pump station and fans cycle off ten seconds later.


Mounting Instructions

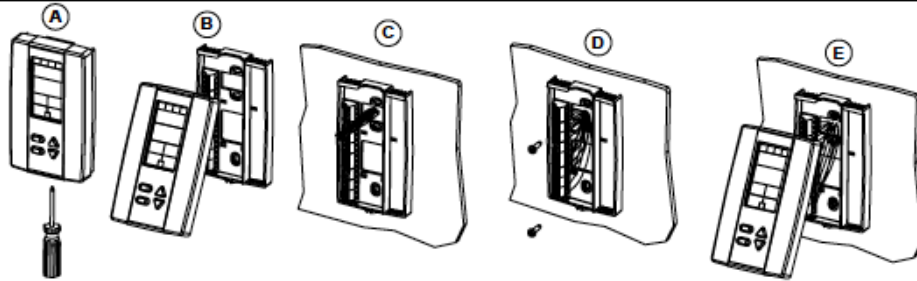

CAUTION: Risk of malfunction. Remove power prior to separate humidistat cover from its base.

- Remove the screw (captive) holding the base and the front cover of the humidistat.
- Lift the front cover of the humidistat to separate it from the base.
- Pull wire through the base hole.
- Secure the base to the wall using wall anchors and screws (supplied). Make the appropriate connections.
- Mount the control module on the base and secure using the screw.

Dimensions

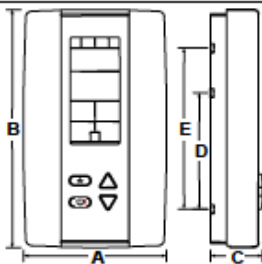

Dimension	Imperial (in)	Metric (mm)
A	2.85	73
B	4.85	123
C	1.00	24
D	2.36	60
E	3.27	83




- Nepronic Zone Humidity Sensor Controller
- Installation Guidelines
- Wiring Connections
- Programming Instructions (7 pgs)

Wiring Connections for Nepronic Humidistat Zone Controller

The electrician provides low voltage 24VAC 3 wire 18 gauge cable from each pump out to the HRO20 zone humidistat/controller (24VAC supply at pump). Each zone requires one humidistat and one dedicated 24VAC cable to the terminals #1, #2 and # 8 on the humidistat internal panel. All other terminals are to be ignored. Terminals on the pump station are marked "Relay 1, Relay 2, Hot and Neutral".

24VAC Cable Routing Through Outside Sleeves:

Shown is the outside wiring sleeves for all 24VAC cable to access to internal 24VAC terminals for a two zone pump. A one zone pump would have only the SENSOR sleeve and one CONTROL BOX sleeve.

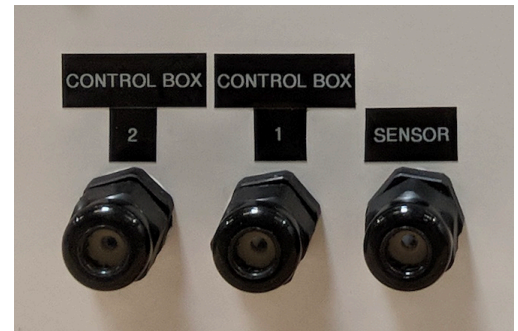


All 24VAC Humidistat Wiring for each zone is routed through the sleeve labeled "SENSOR" (the "SENSOR" hole is where the 24V wiring will be sleeved, to send 24VAC power to the Nepronic(s), and to receive the 24V HOT start-signal(s) back).

All 24VAC Fan Control Wiring for each zone is routed through the corresponding label CONTROL BOX 1 for Zone 1, CONTROL BOX 2 for Zone 2 (where the 24V wiring will be sleeved, to send the 24VAC signal to the fan relay boxes).


24VAC Humidistat Cable Connections to Internal Terminals:

- Connect Nepronic Humidistat Terminal #1 (marked common) for Zone #1 to internal connection marked Neutral. If two zones, wire together both lines and connect both to Neutral.

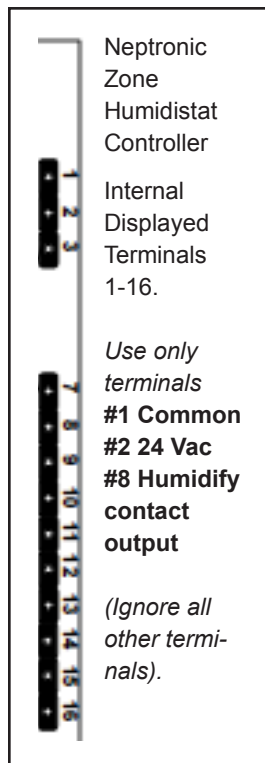

- Connect Humidistat Terminal #2 (marked 24 Vac) for Zone #1 to internal connection marked Hot. If two zones, wire together both lines and connect both to Hot.

- Connect Humidistat Terminal #8 (marked Humidify contact output) for Zone #1 to internal connection marked Relay 1 (This is where the incoming 24VAC Hot from the Nepronic should land in order to activate Zone #1).

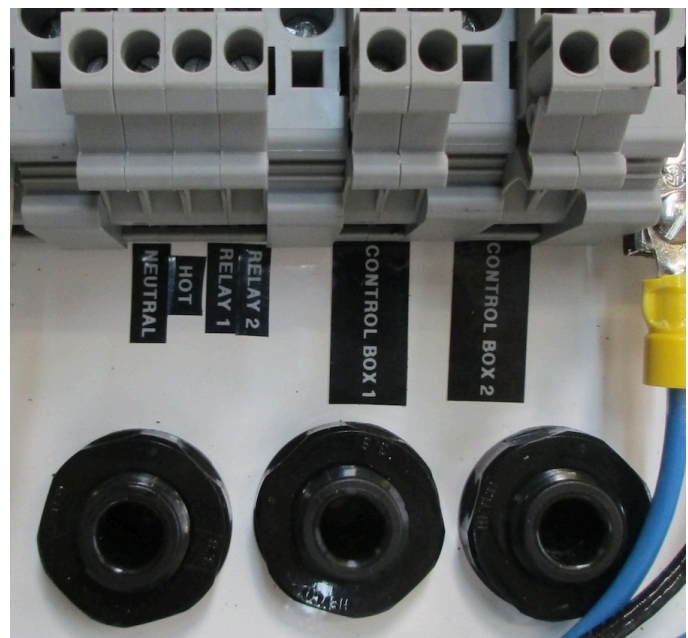

- Connect Humidistat Terminal #8 (marked Humidify contact output) for Zone #2 to internal connection marked Relay 2 (This is where the incoming 24VAC Hot from the Nepronic should land in order to activate Zone #2).



- Nepronic Zone Humidity Sensor Controller
- Installation Guidelines
- Wiring Connections
- Programming Instructions

Programming Mode

When in this mode this symbol is displayed. Please press on button to advance to the next program function, press on button to return to preceding stage and press on button or to change value. You can leave the programming mode at any time, changed values will be recorded.

Step	Display	Description	Values
1		Internal humidity sensor offset calibration: Display shows "INSIDE HUMIDITY SENSOR OFFSET" and the relative humidity percentage read by internal humidity sensor. Humidify symbol is also displayed. You can adjust the calibration of the sensor by comparing with a known humidistat. For example if humidistat has been installed in an area where humidity is slightly different than the room typical humidity (humidistat installed right under the air diffuser).	Range: 10 to 90 %RH (max. offset ± 5 %) Increment: 0.1 %RH 0.0 %RH no humidity sensor (factory calibrated)
2		Internal temperature sensor calibration: Display shows "INSIDE TEMPER SENSOR OFFSET" and the temperature read by internal temperature sensor. You can adjust the calibration of the sensor by comparing with a known thermometer. For example if thermostat has been installed in an area where temperature is slightly different than the room typical temperature (humidistat installed right under the air diffuser).	Range : 10 to 40 °C [50 to 104 °F] (max. offset ± 5 °C) Increment: 0.1 °C [0.2 °F] (factory calibrated)
3		Minimum set point: Display shows "ADJUST MINIMUM USER SETPNT" and the minimum humidity set point. Please select the desired minimum humidity set point. The minimum value is restricted by the maximum value. (step #4)	Minimum range: 10 to 90 %RH Increment: 1 %RH Default value: 15 %RH
4		Maximum set point: Display shows "ADJUST MAXIMUM USER SETPNT" and the maximum humidity set point. Please select the desired maximum humidity set point. The maximum value is restricted by the minimum value. (step #3)	Maximum range: 10 to 90 %RH Increment: 1 %RH Default value: 65 %RH
5		Locking the set point: Display shows "USER SETPNT LOCKED" and the status of the function. You can lock or unlock the end user set point adjustment. If locked, "YES" and lock symbol will appear.	 Default value: Unlocked (NO)
6		Adjust the control mode: Display shows "ADJUST CONTROL MODE". Humidify or dehumidify symbols are also displayed. Select which control mode you want to authorize: Automatic humidify and dehumidify (Auto), humidify only (Hu) or dehumidify only (dHu). If you have selected dehumidify only, go directly to step #8.	 Default value: humidify only
7		Adjust humidify set point: Display shows "ADJUST HUMIDITY SETPNT" and the humidity set point. You can change the humidity set point to the desired value; it should be within the humidity range. Lock symbol will appear if the set point was locked at step #5. Set point value is restricted by the minimum and maximum value. (step #3 & 4) If you have selected humidify only at step #6, go directly to step #9.	Set point range: 10 to 90 %RH Increment: 1 %RH Default value: 40 %RH



- Nepronic Zone Humidity Sensor Controller
- Installation Guidelines
- Wiring Connections
- Programming Instructions

Step	Display	Description	Values
8		Adjust dehumidify set point: Display shows "ADJUST DEHUMI SETPT" and the dehumidify set point. You can change the dehumidify set point to the desired value; it should be within the humidity range. Lock symbol will appear if the set point was locked at step #5. Set point value is restricted by the minimum and maximum value. (step #3 & 4)	Set point range: 10 to 90 %RH Increment: 1 %RH Default value: 50 %RH
9		Set On/Off function enable or disable: Display shows "ENABLE ON OFF CONTROL MODE". You can enable or disable the On/Off function in control mode adjustment by end user. If you have selected dehumidify only at step #6, go directly to step #11.	 Default value: Enable (YES)
10		Humidify proportional band: Display shows "HUMIDITY CONTROL RAMP" and the value of humidify ramp. Humidify symbol is also displayed. Select the desired span for the humidify ramp. If you have selected humidify only at step #6, go directly to step #12.	Proportional band: 2 to 10 %RH Increment: 0.5 %RH Default value: 5.0 %RH
11		Dehumidify proportional band: Display shows "DEHUMI CONTROL RAMP" and the value of dehumidify ramp. Dehumidify symbol is also displayed. Select the desired span for the dehumidify ramp.	Proportional band: 2 to 10 %RH Increment: 0.5 %RH Default value: 5.0 %RH
12		Control dead band: Display shows "CONTROL DEAD BAND" and its value. Humidify/dehumidify symbol are also displayed since this value applies to both. Please select the desired dead band value. If you have selected dehumidify only at step #6, go directly to step #14.	Dead band range : 0.3 to 5.0 %RH Increment: 0.1 %RH Default value: 0.3 %RH
13		Minimum voltage of AO1 output: Display shows "MIN VDC ANALOG AO1 OUTPUT" and the value of the minimum voltage of the signal "0.0" for 0 to 10 Vdc or "2.0" for 2 to 10 Vdc. Humidify symbol is also displayed. Please select the desired value of the minimum voltage of AO1 output. If you have selected humidify only at step #6, go directly to step #15.	 Range: 0.0 or 2.0 Volt Default value: 0.0 Volt
14		Minimum voltage of AO2 output: Display shows "MIN VDC ANALOG AO2 OUTPUT" and the value of the minimum voltage of the signal "0.0" for 0 to 10 Vdc or "2.0" for 2 to 10 Vdc. Dehumidify symbol is also displayed. Please select the desired value of the minimum voltage of AO2 output.	 Range: 0.0 or 2.0 Volt Default value: 0.0 Volt
15		Minimum voltage of AO3 output: Display shows "MIN VDC ANALOG AO3 OUTPUT" and the value of the minimum voltage of the signal "0.0" for 0 to 10 Vdc or "2.0" for 2 to 10 Vdc. Humidify symbol is also displayed. Please select the desired value of the minimum voltage of AO3 output. If you have selected dehumidify only at step #6, go directly to step #17.	 Range: 0.0 or 2.0 Volt Default value: 0.0 Volt



- Nepronic Zone Humidity Sensor Controller
- Installation Guidelines
- Wiring Connections
- Programming Instructions

Step	Display	Description	Values
16		Minimum voltage of AO4 output: Display shows "MIN VDC ANALOG AO4 OUTPUT" and the value of the minimum voltage of the signal "0.0" for 0 to 10 Vdc or "2.0" for 2 to 10 Vdc. Humidify symbol is also displayed. Please select the desired value of the minimum voltage of AO4 output.	 Range: 0.0 or 2.0 Volt Default value: 0.0 Volt
17		Set AI1 input signal: Display shows "SELECT AI1 INPUT SIGNAL". Select which signal you want for AI1 input. You can choose: <ul style="list-style-type: none"> • OFF (input not used), • EHS.0 (external humidity sensor 0-10 Vdc), • EHS.2 (external humidity sensor 2-10 Vdc), • SPS (external set point from Nepronic humidifier), • HIL.0 (high limit 0-10 Vdc), • HIL.2 (high limit 2-10 Vdc). If you have selected OFF or SPS, go directly to step #20. <i>Note: If SPS is selected, the dehumidify set point will be disabled.</i>	 Default value: OFF
18		External humidity sensor offset calibration: (if "EHS.0", "EHS.2", "HIL.0" or "HIL.2" has been selected at step #17) Display shows "EXTERN HUMIDITY SENSOR OFFSET" and relative humidity percentage read by external humidity sensor. Humidify symbol is also displayed. If the sensor is not connected or short circuited, the display shows "Error". You can adjust the calibration of the sensor by comparison with a known humidistat. For example if humidistat has been installed in an area where humidity is slightly different than the room typical humidity.	Range: 10 to 90 %RH (max. offset ± 5 %) Increment: 0.1 %RH 0.0 %RH = no humidity sensor
19		Adjust high limit set point: (if "HIL.0" or "HIL.2" has been selected at step #17) Display shows "ADJUST SETPOINT HIGH LIMIT" and the high limit set point. Select the desired high limit humidity set point; this one should be within the high limit range.	Set point range: 10 to 90 %RH Increment: 1 %RH Default value: 80 %RH
20		Set AI2 input signal: Display shows "SELECT AI2 INPUT SIGNAL". Select which signal you want for AI2 input. You can choose: <ul style="list-style-type: none"> • OFF (input not used), • Wts (Window Temperature Sensor 10KΩ), • Ots (Outside Temperature Sensor 10KΩ). If you have selected OFF, go directly to step #1.	 Default value: OFF
21		External temperature sensor calibration: (if "Wts" or "Ots" has been selected at step #20) Display shows "EXTERN TEMPER SENSOR OFFSET" and the temperature read by the external temperature sensor (if connected on the selected input). If the sensor is not connected or short circuited, the display shows "Error". You can adjust the calibration of the external sensor by comparison with a known thermometer.	Range: -30 to 90 °C [-22 to 194 °F] (max. offset ± 5 °C) Increment: 0.1 °C [0.2 °F]
22		Window temperature sensor compensation factor: (if "Wts" has been selected at step #20) Display shows "WINDOW TEMPER SENSOR COMPENS" and the value of the compensation factor. You can adjust the compensation factor to avoid condensation on the window. The lower the compensation factor, the lower the maximum humidity set point can be.	Range : 25 to 90 Increment: 5 Default value: 80



- Nepronic Zone Humidity Sensor Controller
- Installation Guidelines
- Wiring Connections
- Programming Instructions

Operation Mode

Step	Description	Display
A	At powering up, humidistat will light display and activate all LCD segments during 2 seconds.	
	Illuminating the LCD To illuminate the LCD, you just have to push onto any of the 4 buttons. LCD will light for 4 seconds.	
	Humidity display In operation mode, humidistat will automatically display the humidity reading. If "OFF", "---" and alarm symbol are displayed, the humidity sensor is not connected or short circuited.	
	Temperature display To display the temperature, press on (*) . The temperature reading is displayed for 2 seconds, if "---" is displayed, the temperature sensor is not connected or short circuited. To change the scale between °C and °F, press on both Δ and ∇ for 3 seconds.	
	Alarm If there is an issue with the humidifier, the alarm Δ symbol will be displayed.	
	<i>Note: Available only if the humidifier alarm output (NO) is connected to the humidistat.</i>	
B	Humidity set point(s) display and adjustment	
	1. To display the set point(s), press two times on Δ or ∇ .	
	2. If Control Mode was set to Humidify only or Dehumidify only: 2.1. Humidify or Dehumidify set point will be displayed during 3 seconds. 2.2. To adjust set point, press on Δ or ∇ while the set point is displayed.	
	If Control Mode was set to Automatic Humidify and Dehumidify: 2.1. Humidify set point will be displayed during 3 seconds. To adjust the set point, press on Δ or ∇ while the set point is displayed. 2.2. Press on (*) to switch to the dehumidify set point. To adjust the set point, press on Δ or ∇ while the set point is displayed. 2.3. You can press on (*) to go back to display the humidify set point or go step 3.	
3. After 3 seconds of no buttons activity, the humidistat will return to normal mode.		
	<i>Note: If set point adjustment has been locked, Δ symbol will be displayed.</i>	
C	On/Off selection : To turn On/Off the humidistat, press once onto the (ON/OFF) button. Control mode will be displayed during 5 seconds.	
	<ul style="list-style-type: none"> ✓ Humidify only / OFF ✓ Dehumidify only / OFF ✓ Automatic Humidify & Dehumidify / OFF 	
	<i>Note: These selections can vary according to the choice made in step #6 of the programming mode.</i>	